RF2300 Retrofitting Insulation In The Wall:
From The Outside



RF2300 Retrofitting Insulation In The Wall


Issued: 29/07/26 Revision: A

www.proclima.co.nz
www.proclima.com.au

This drawing is the property of Pro Clima NZ Ltd &/or Pro Clima Australia Pty Ltd and must not be re-published without permission. The drawing is intended as guidance for typical Pro Clima system detailing and is subject to change without notice. For application to specific projects, thermal and hygrothermal performance should be confirmed by hygrothermal analysis using software e.g. WUFI®. Structural, fire and acoustic engineering design should be undertaken by a suitably qualified person.

RF2301 Retrofitting Insulation In The Wall: From The Outside


Step 1 of 9 - Initial Wall

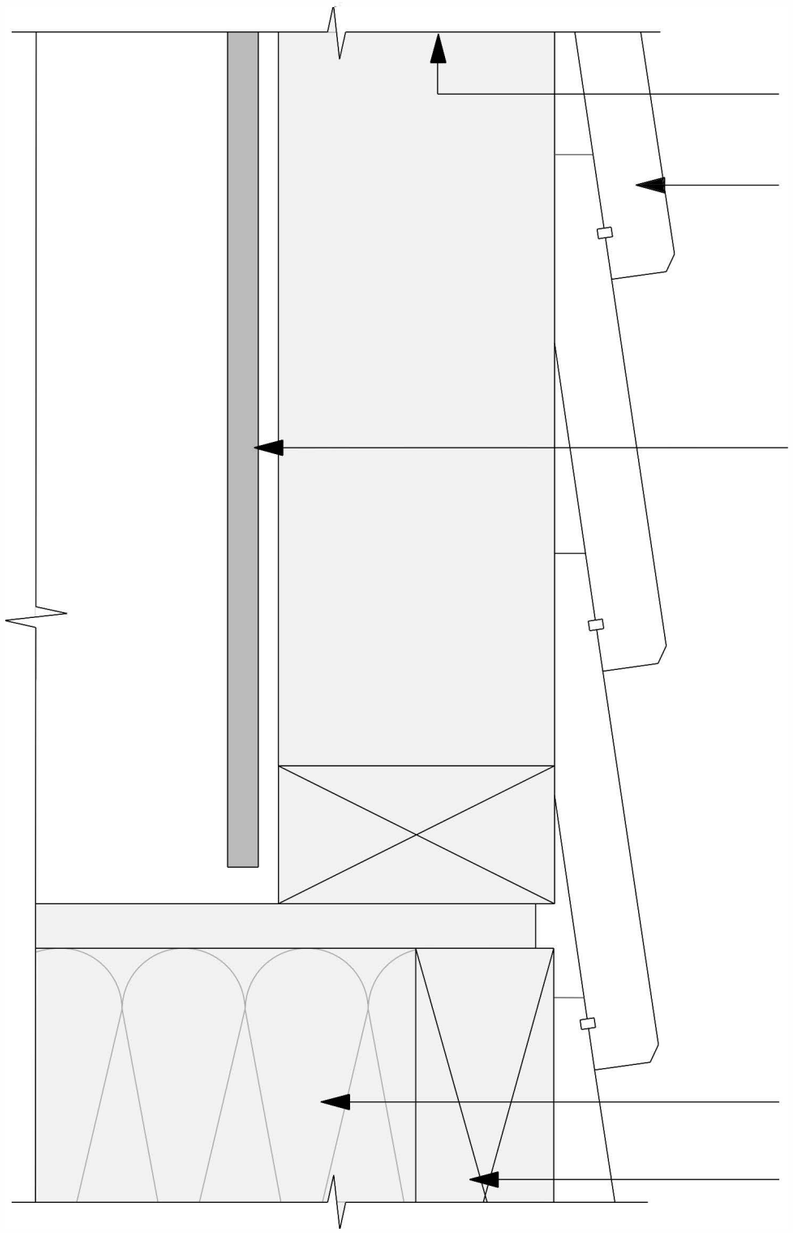


1:4 @A3

Vertical Section

Exterior View

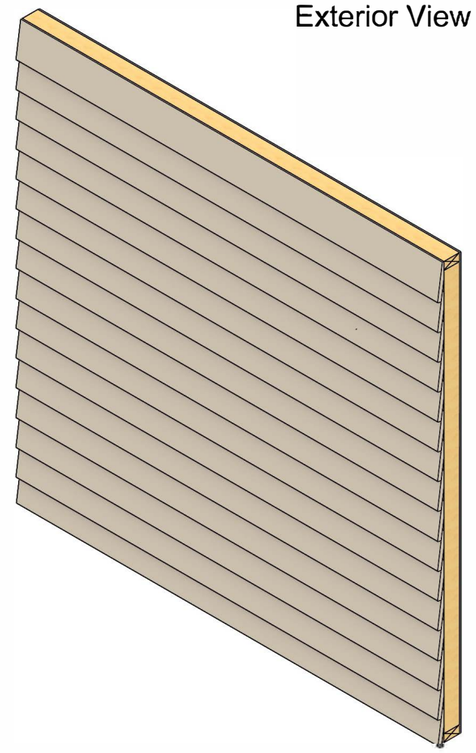

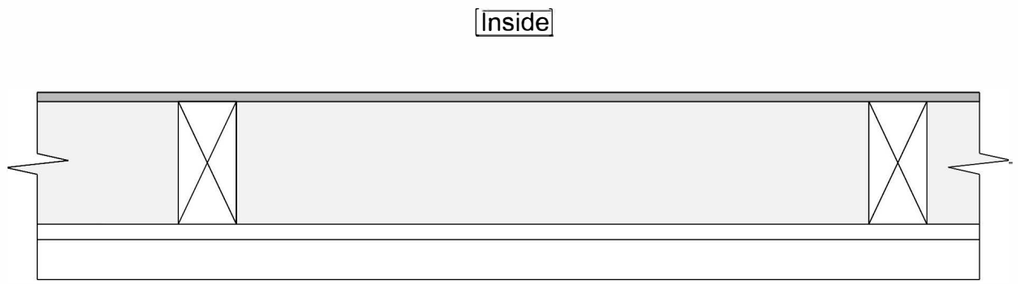

Horizontal Section

1:4 @A3

RF2301 Step 1: Initial Wall

Issued: 29/07/26 Revision: A


pro clima®

www.proclima.co.nz
www.proclima.com.au

This drawing is the property of Pro Clima NZ Ltd &/or Pro Clima Australia Pty Ltd and must not be re-published without permission. The drawing is intended as guidance for typical Pro Clima system detailing and is subject to change without notice. For application to specific projects, thermal and hygrothermal performance should be confirmed by hygrothermal analysis using software e.g. WUFI®. Structural, fire and acoustic engineering design should be undertaken by a suitably qualified person.

RF2302 Retrofitting Insulation In The Wall: From The Outside


Step 2 of 9 - Remove Weatherboard Cladding

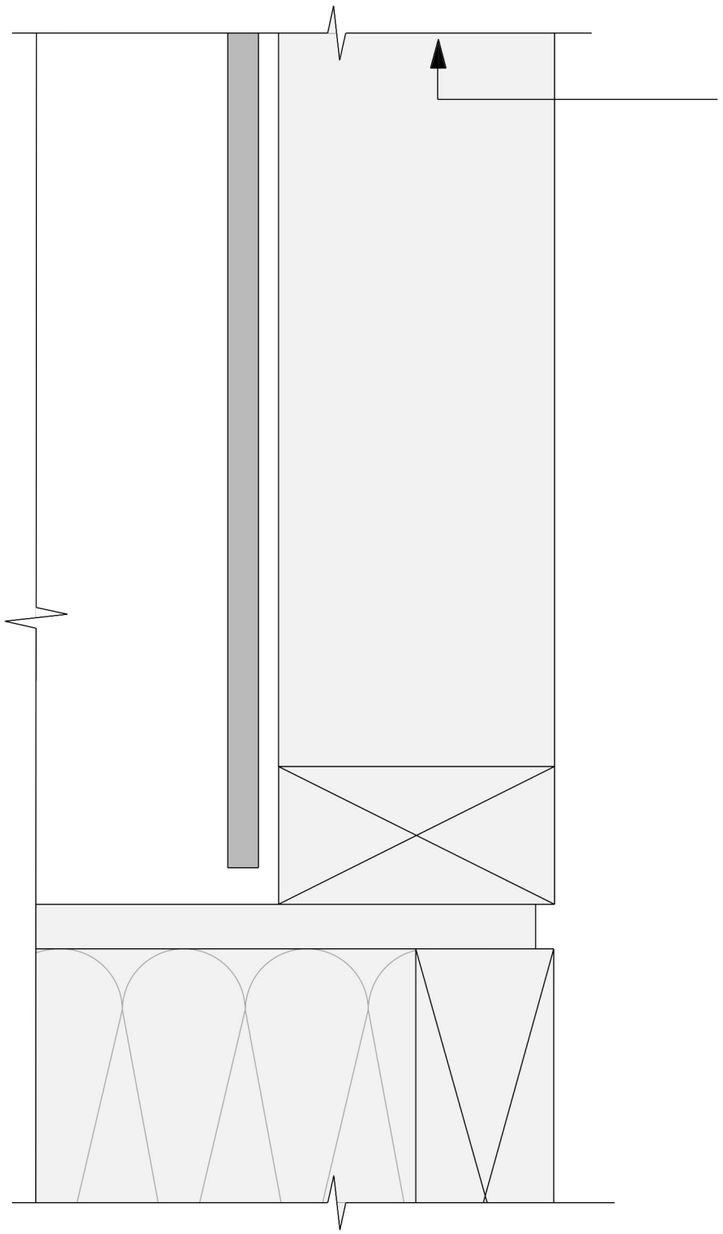


1:4 @A3

Vertical Section

Exterior View

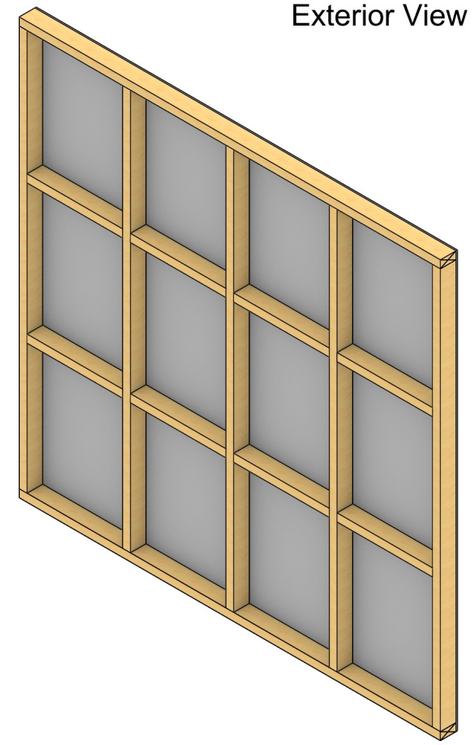

Inside

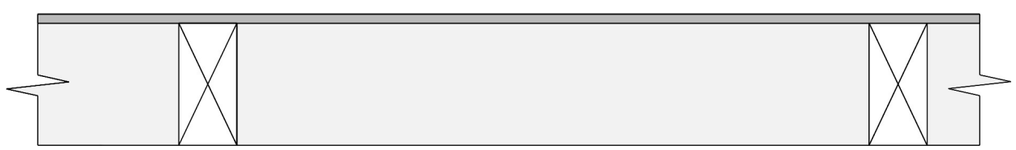

Outside

Horizontal Section

1:4 @A3

RF2302 Step 2: Remove Weatherboard Cladding

Issued: 29/07/26 Revision: A


pro clima®

www.proclima.co.nz
www.proclima.com.au

This drawing is the property of Pro Clima NZ Ltd &/or Pro Clima Australia Pty Ltd and must not be re-published without permission. The drawing is intended as guidance for typical Pro Clima system detailing and is subject to change without notice. For application to specific projects, thermal and hygrothermal performance should be confirmed by hygrothermal analysis using software e.g. WUFI®. Structural, fire and acoustic engineering design should be undertaken by a suitably qualified person.

RF2303 Retrofitting Insulation In The Wall: From The Outside

Step 3 of 9 - Remove Nogs

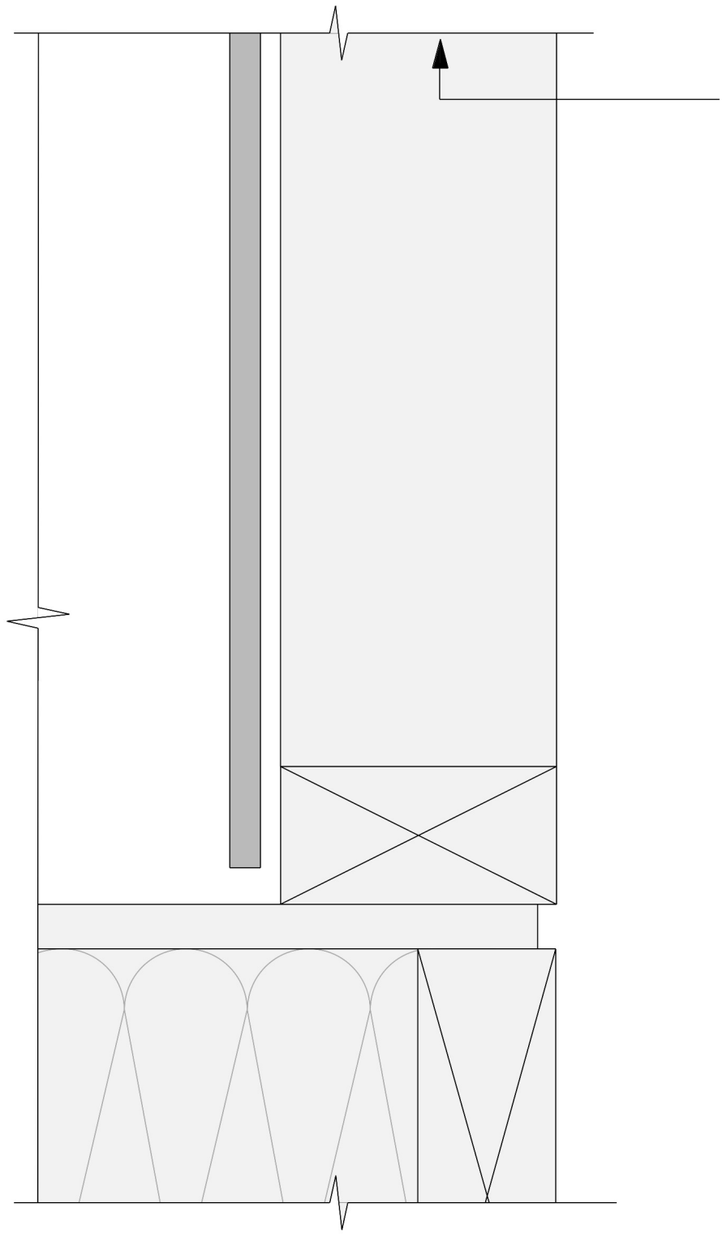



1:4 @A3

Vertical Section

Remove Nogs If Possible

Exterior View

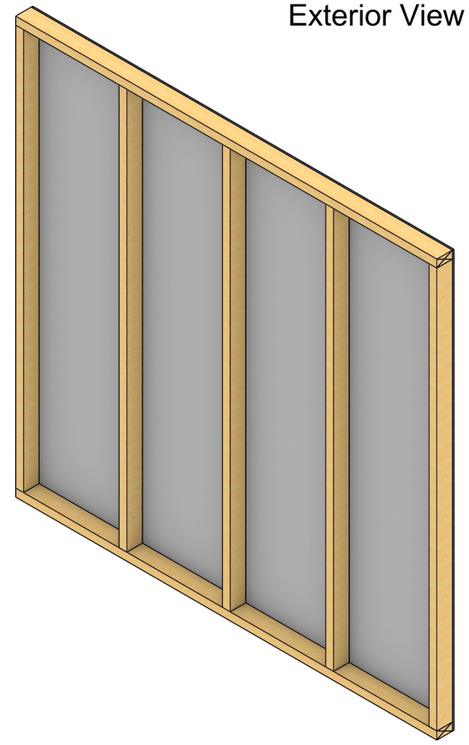

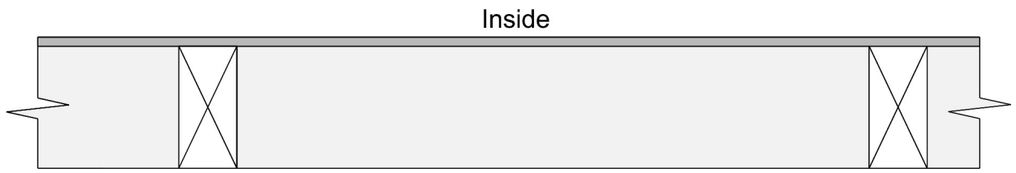

Horizontal Section

1:4 @A3

RF2303 Step 3: Remove Nogs


Issued: 29/07/26 Revision: A

www.proclima.co.nz
www.proclima.com.au

This drawing is the property of Pro Clima NZ Ltd &/or Pro Clima Australia Pty Ltd and must not be re-published without permission. The drawing is intended as guidance for typical Pro Clima system detailing and is subject to change without notice. For application to specific projects, thermal and hygrothermal performance should be confirmed by hygrothermal analysis using software e.g. WUFI®. Structural, fire and acoustic engineering design should be undertaken by a suitably qualified person.

RF2304 Retrofitting Insulation In The Wall: From The Outside

Step 4 of 9 - Place DASATOP Over Framing, Sealing Overlaps With TESCON EXTORA

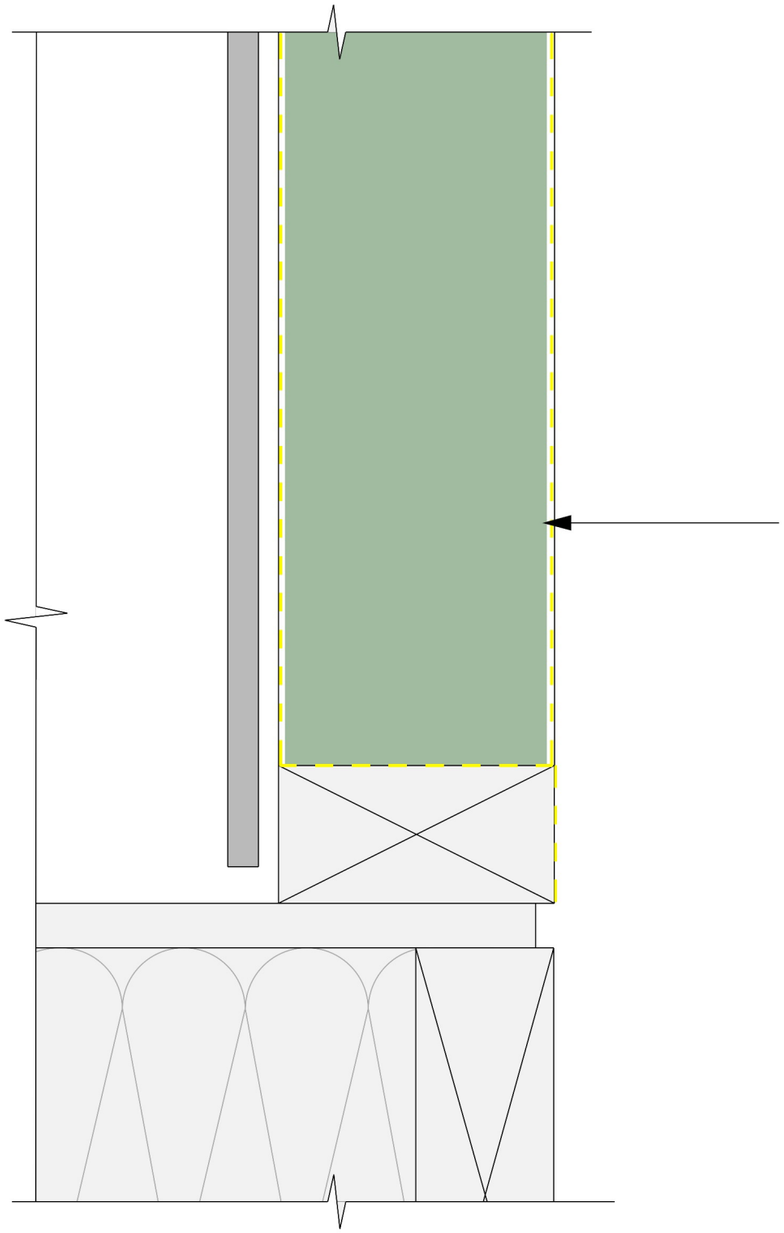



Intelligent Airtight barrier
DASATOP Seal At Perimeter And Folds With **ORCON CLASSIC**

1:2 @A3

Vertical Section

Exterior View

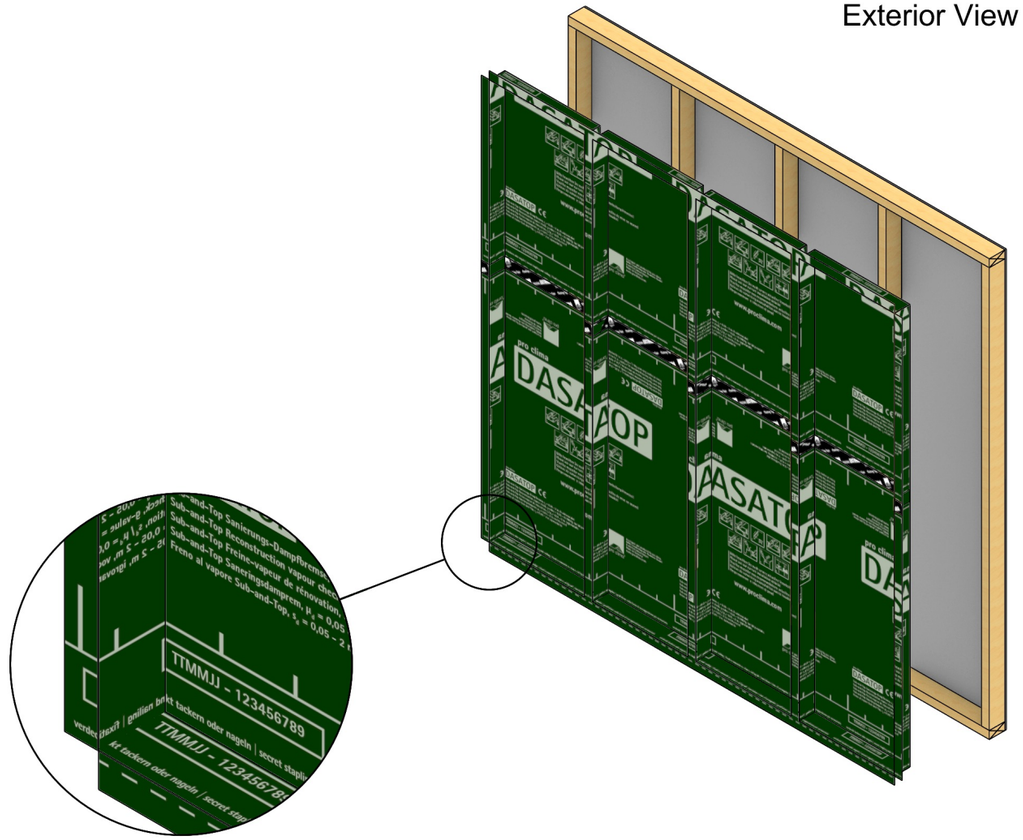

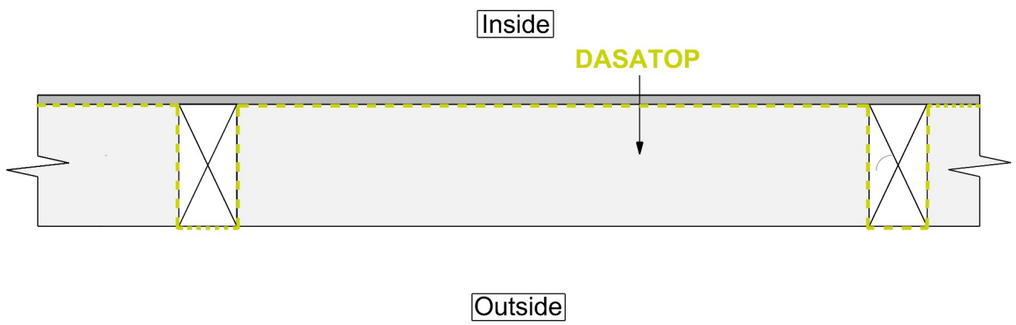

Horizontal Section

1:4 @A3

RF2304 Step 4: Place DASATOP Over Framing, Sealing Overlaps With TESCON EXTORA

Issued: 29/07/26 Revision: A


pro clima®
www.proclima.co.nz
www.proclima.com.au

This drawing is the property of Pro Clima NZ Ltd &/or Pro Clima Australia Pty Ltd and must not be re-published without permission. The drawing is intended as guidance for typical Pro Clima system detailing and is subject to change without notice. For application to specific projects, thermal and hygrothermal performance should be confirmed by hygrothermal analysis using software e.g. WUFI®. Structural, fire and acoustic engineering design should be undertaken by a suitably qualified person.

RF2305 Retrofitting Insulation In The Wall: From The Outside

Step 5 of 8 - Place DASATOP FIX Over DASATOP, Staple In Place


Airtightness testing at this stage.

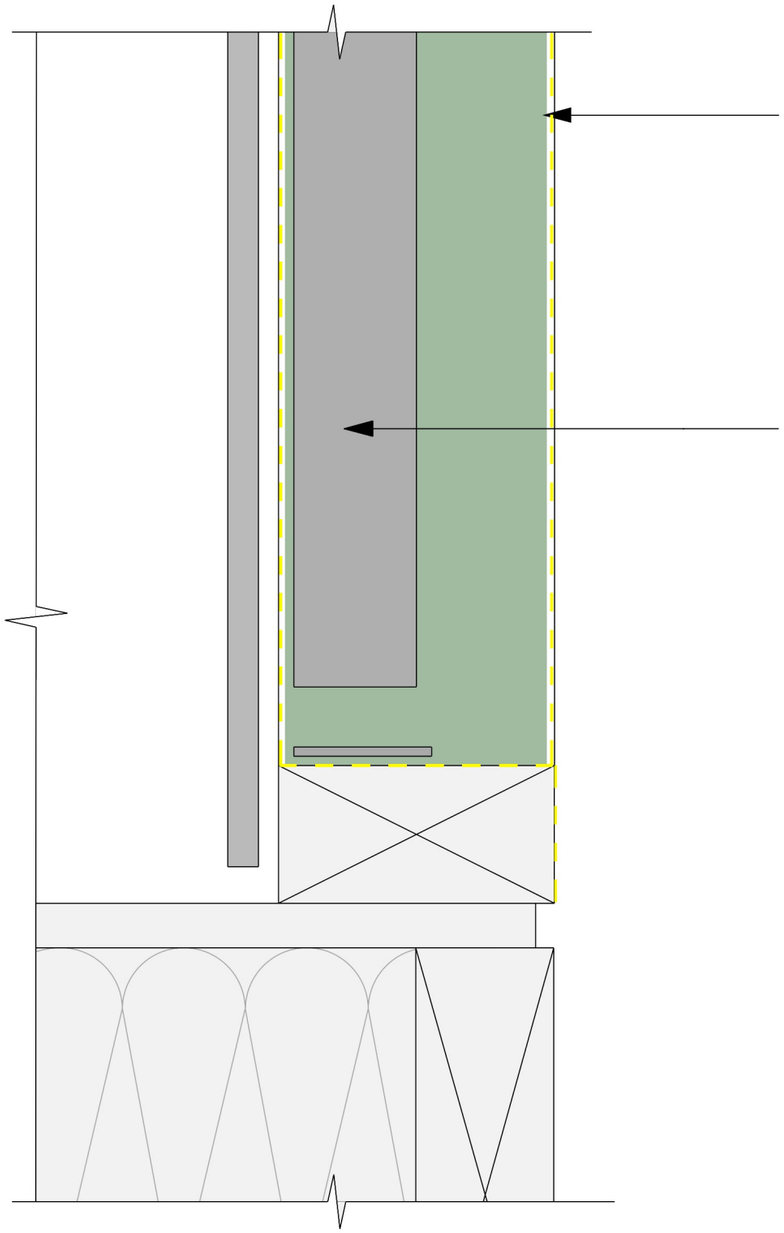


1:2 @A3

Vertical Section

Exterior View

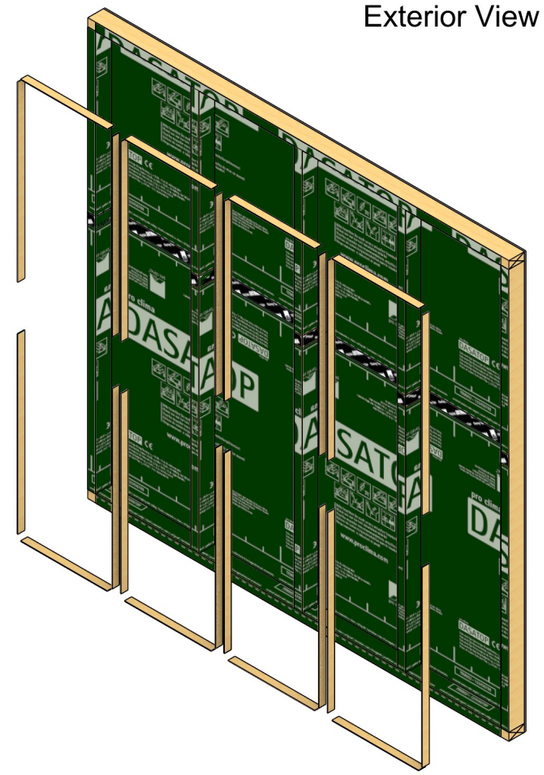

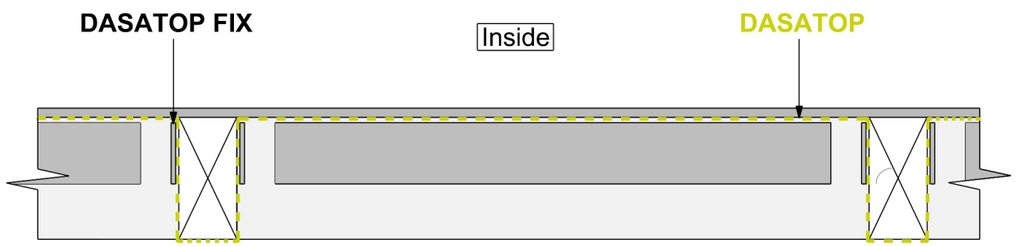

Outside

Horizontal Section

1:4 @A3

RF2305 Step 5: Place DASATOP FIX Over DASATOP, Staple In Place


Issued: 29/07/26 Revision: A

pro clima®
www.proclima.co.nz
www.proclima.com.au

This drawing is the property of Pro Clima NZ Ltd &/or Pro Clima Australia Pty Ltd and must not be re-published without permission. The drawing is intended as guidance for typical Pro Clima system detailing and is subject to change without notice. For application to specific projects, thermal and hygrothermal performance should be confirmed by hygrothermal analysis using software e.g. WUFI®. Structural, fire and acoustic engineering design should be undertaken by a suitably qualified person.

RF2306 Retrofitting Insulation In The Wall: From The Outside


Step 6 of 9 - Insert Insulation Over DASATOP

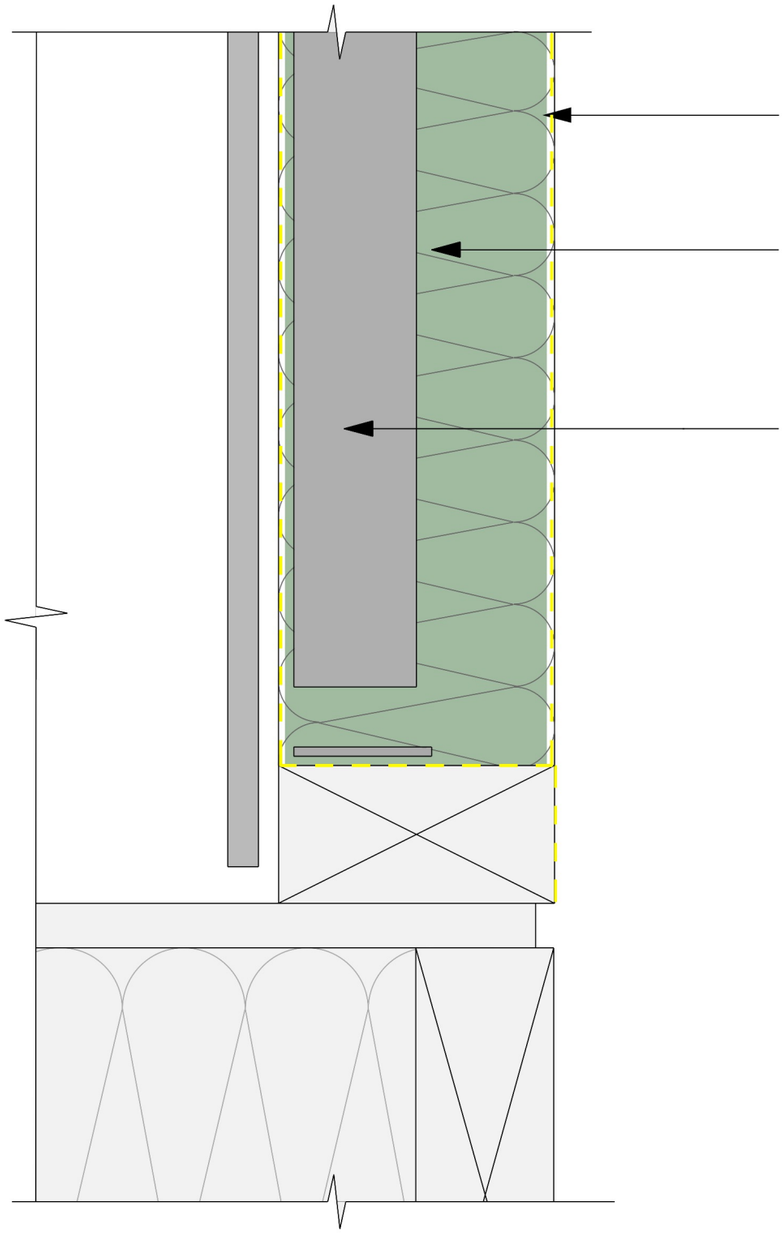


1:4 @A3

Vertical Section

Exterior View

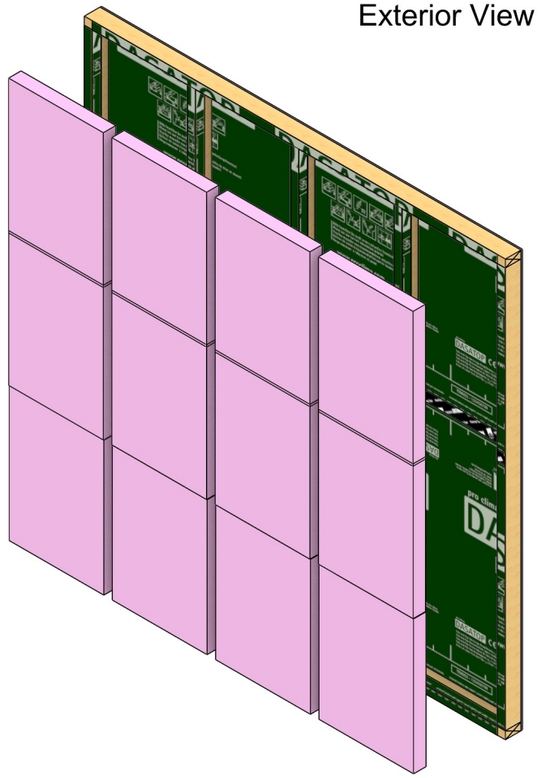

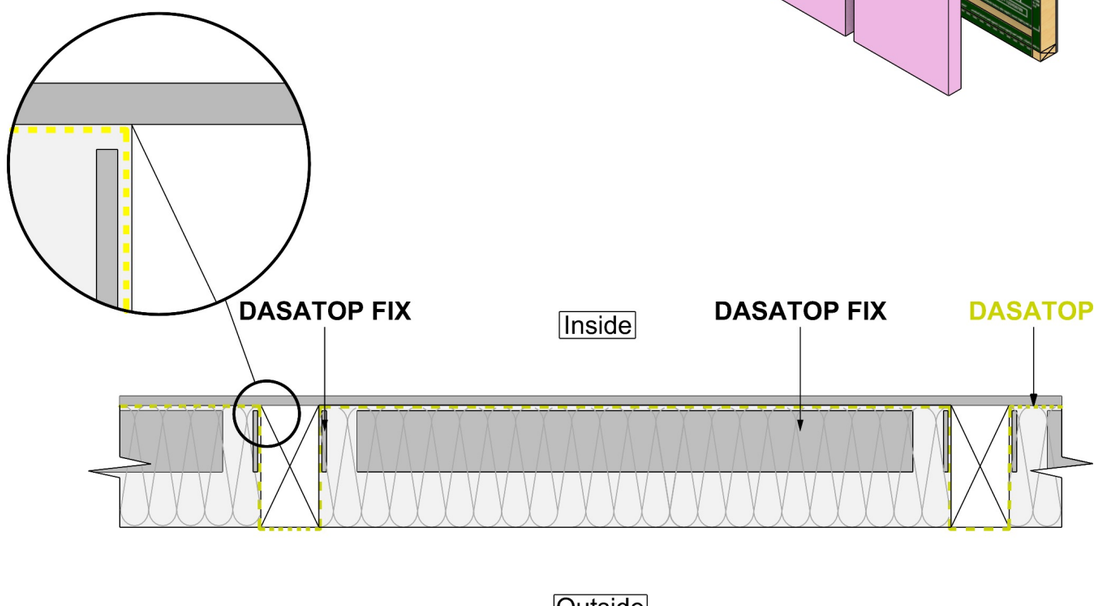

Horizontal Section

1:4 @A3

RF2306 Step 6: Insert Insulation Over DASATOP

Issued: 29/07/26 Revision: A


pro clima®

www.proclima.co.nz
www.proclima.com.au

This drawing is the property of Pro Clima NZ Ltd &/or Pro Clima Australia Pty Ltd and must not be re-published without permission. The drawing is intended as guidance for typical Pro Clima system detailing and is subject to change without notice. For application to specific projects, thermal and hygrothermal performance should be confirmed by hygrothermal analysis using software e.g. WUFI®. Structural, fire and acoustic engineering design should be undertaken by a suitably qualified person.

RF2307 Retrofitting Insulation In The Wall: From The Outside

Step 7 of 9 - Install SOLITEX EXTASANA Over Insulation

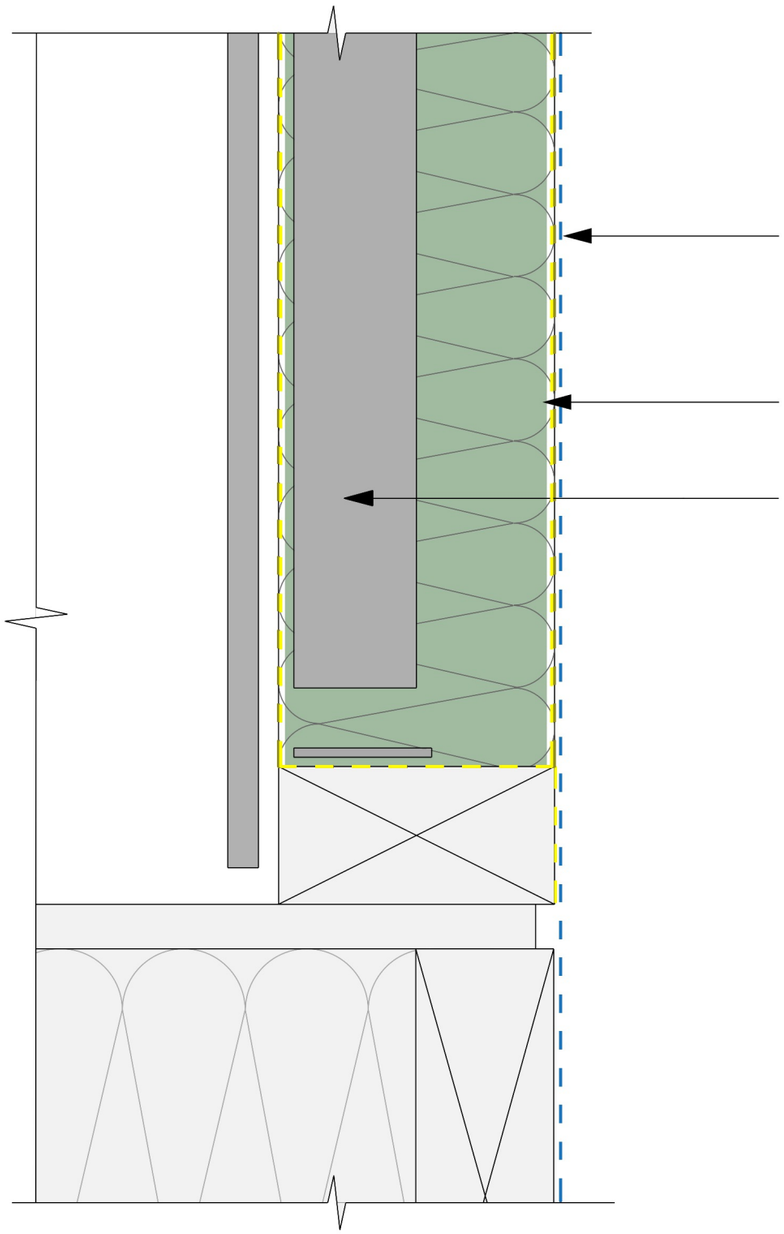

Weather Resistant Barrier Stapled Into Place
SOLITEX EXTASANA


Intelligent Airtight barrier
DASATOP


DASATOP FIX

1:4 @A3

Vertical Section

Exterior View

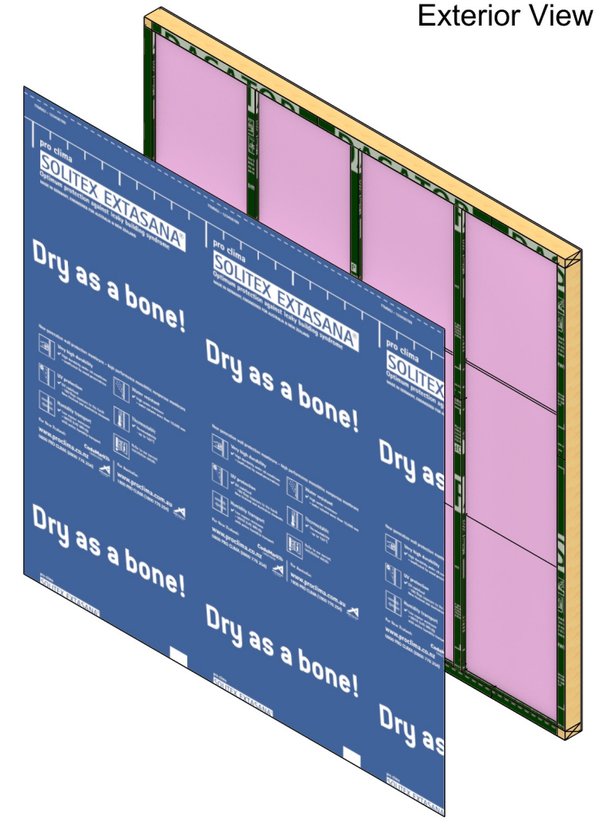

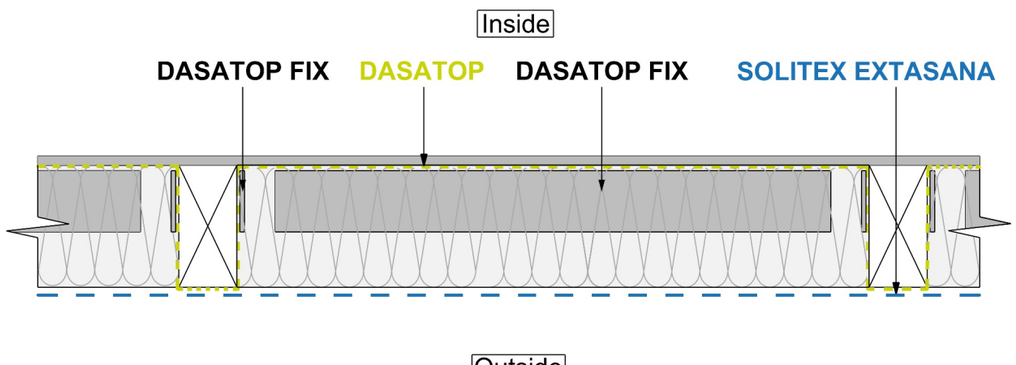

Horizontal Section

1:4 @A3

RF2307 Step 7: Install SOLITEX EXTASANA Over Insulation


Issued: 29/07/26 Revision: A

pro clima®
www.proclima.co.nz
www.proclima.com.au

This drawing is the property of Pro Clima NZ Ltd &/or Pro Clima Australia Pty Ltd and must not be re-published without permission. The drawing is intended as guidance for typical Pro Clima system detailing and is subject to change without notice. For application to specific projects, thermal and hygrothermal performance should be confirmed by hygrothermal analysis using software e.g. WUFI®. Structural, fire and acoustic engineering design should be undertaken by a suitably qualified person.

RF2308 Retrofitting Insulation In The Wall: From The Outside

Step 8 of 9 - Cavity Battens On SOLITEX EXTASANA

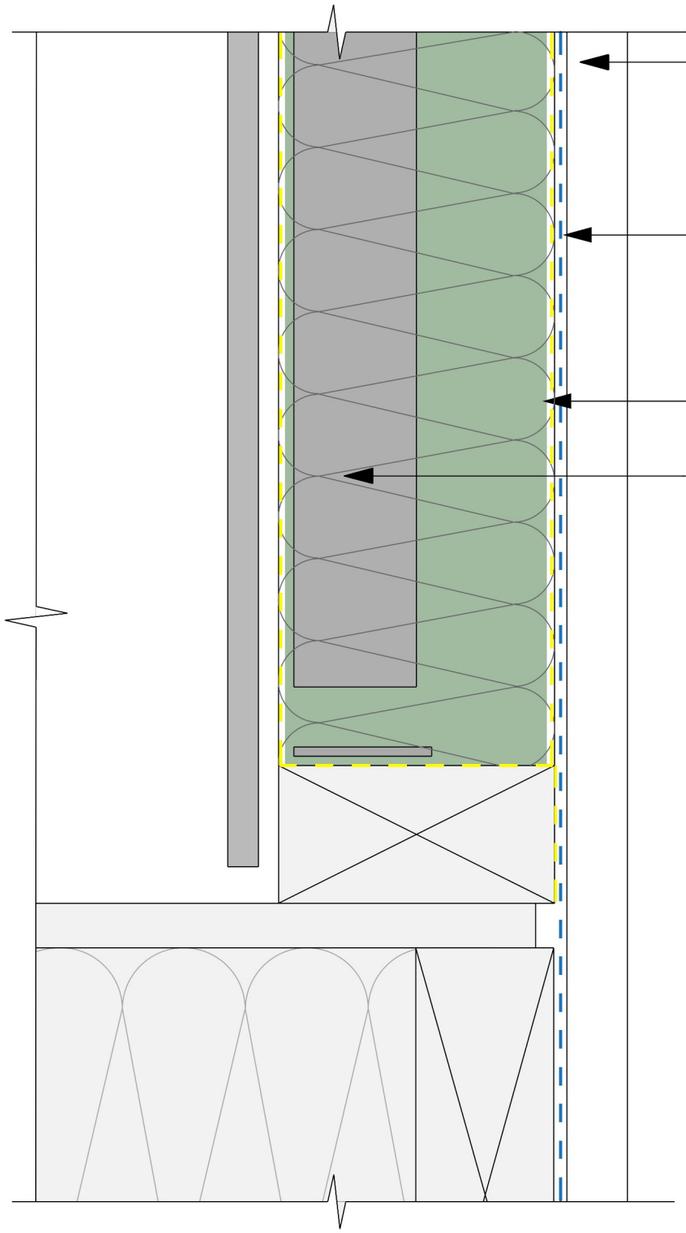

Cavity Batten

Weather Resistant Barrier Stapled Into Place
SOLITEX EXTASANA


Intelligent Airtight barrier
DASATOP


DASATOP FIX

1:4 @A3

Vertical Section

Exterior View

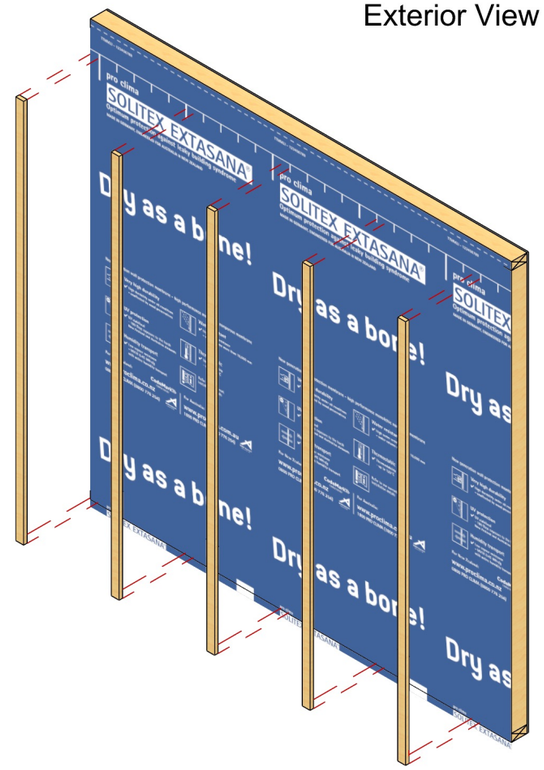

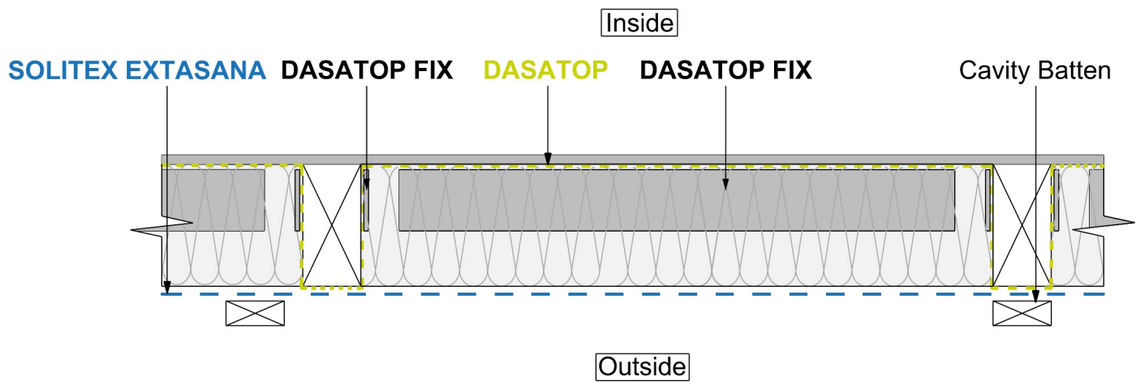

Horizontal Section

1:4 @A3

RF2308 Step 8: Cavity Battens On SOLITEX EXTASANA

Issued: 29/07/26 Revision: A


pro clima®

www.proclima.co.nz
www.proclima.com.au

This drawing is the property of Pro Clima NZ Ltd &/or Pro Clima Australia Pty Ltd and must not be re-published without permission. The drawing is intended as guidance for typical Pro Clima system detailing and is subject to change without notice. For application to specific projects, thermal and hygrothermal performance should be confirmed by hygrothermal analysis using software e.g. WUFI®. Structural, fire and acoustic engineering design should be undertaken by a suitably qualified person.

RF2309 Retrofitting Insulation In The Wall: From The Outside

Step 9 of 9 - Replace Weatherboard Cladding Over Battens

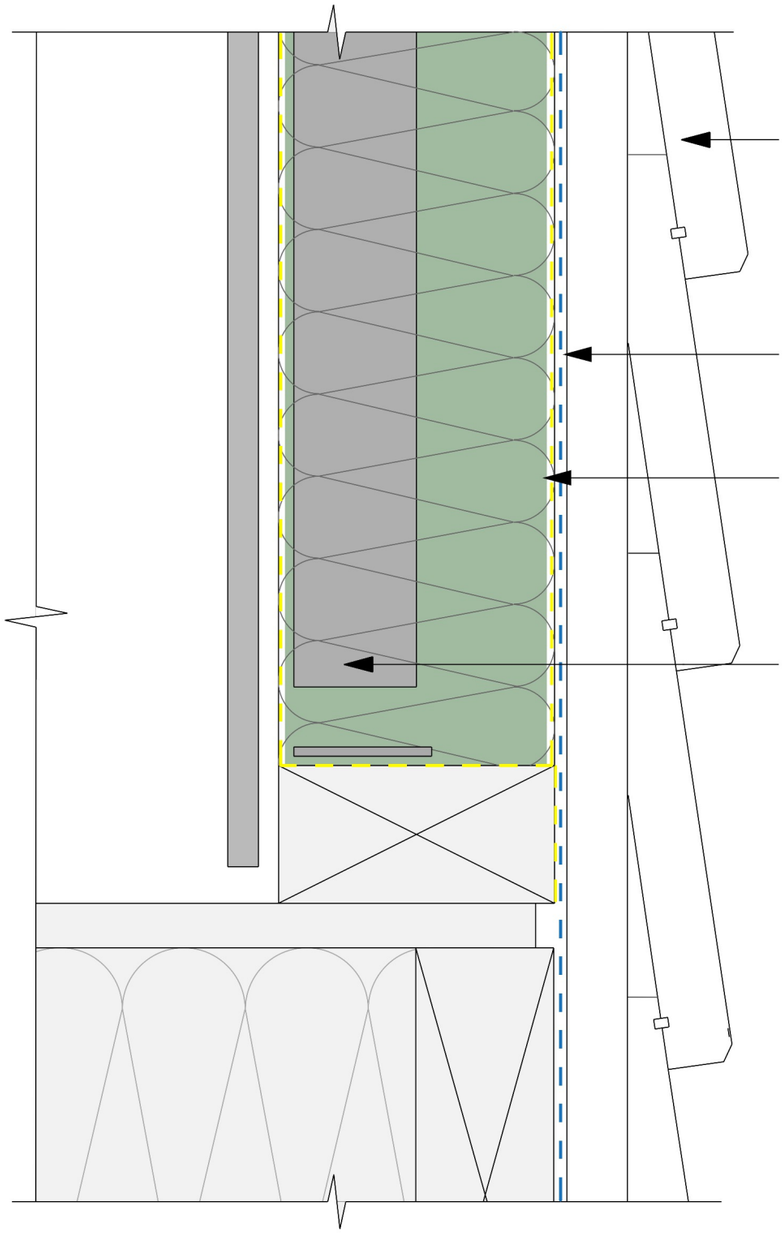

Weatherboard Cladding

Weather Resistant Barrier Stapeled Into Place
SOLITEX EXTASANA


Intelligent Airtight barrier
DASATOP


DASATOP FIX

1:4 @A3

Vertical Section

Exterior View

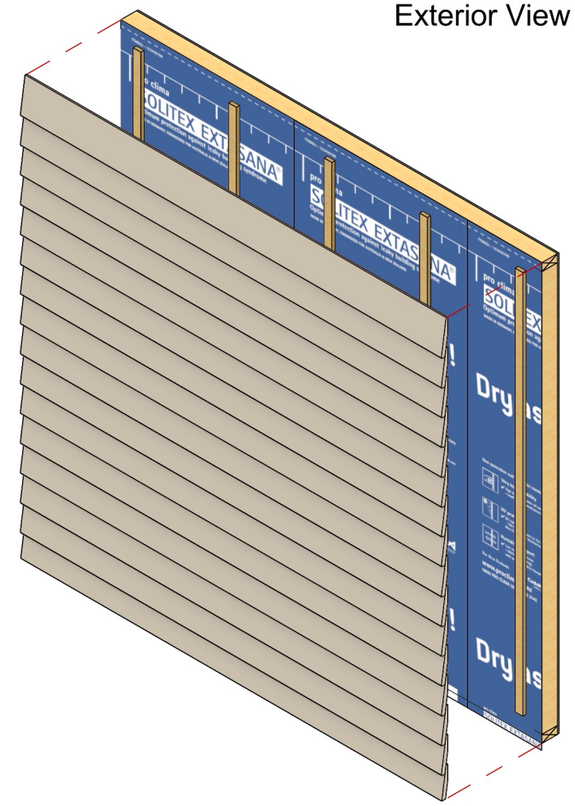

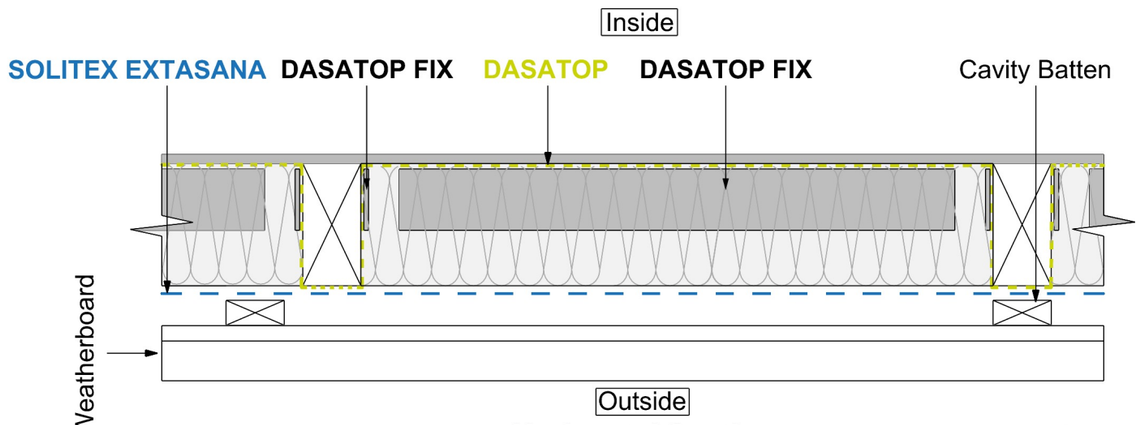

Horizontal Section

1:4 @A3

RF2309 Step 9: Replace Weatherboard Cladding Over Battens

Issued: 29/07/26 Revision: A

www.proclima.co.nz
www.proclima.com.au

This drawing is the property of Pro Clima NZ Ltd &/or Pro Clima Australia Pty Ltd and must not be re-published without permission. The drawing is intended as guidance for typical Pro Clima system detailing and is subject to change without notice. For application to specific projects, thermal and hygrothermal performance should be confirmed by hygrothermal analysis using software e.g. WUFI®. Structural, fire and acoustic engineering design should be undertaken by a suitably qualified person.