



NEW

pro clima

CONTEGA[®] FIDEN EXO

**Pre-compressed joint sealing tape for exterior use
that is open to diffusion and resistant to driving rain**

CONTEGA FIDEN EXO pre-compressed joint sealing tape for exterior applications can be used to create joints on building structures in a manner that is open to diffusion and resistant to driving rain. This particularly weather-resistant tape has a self-adhesive surface on one side for easy installation.

- ✓ Extremely weather-resistant
- ✓ BG1 quality
- ✓ Resistant to driving rain and open to diffusion
- ✓ RAL quality-tested installation
- ✓ Large range for all standard joint widths




www.proclima.co.nz



pro clima CONTEGA[®] FIDEN EXO

Pre-compressed joint sealing tape for exterior use that is open to diffusion and resistant to driving rain

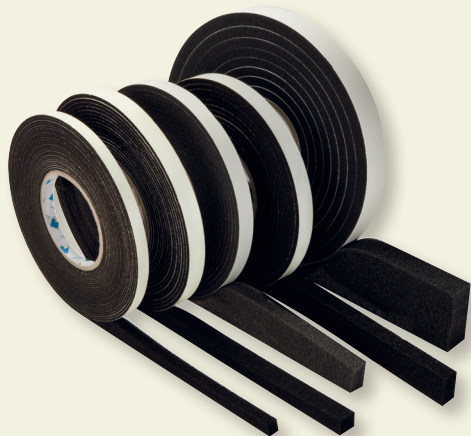

Forms of delivery:

Itemnumber	EAN	Roll width	Joint	Roll length	PU / box	Length / box	PU / pallet	Length / pallet
15547	4026639155474	10 mm	2-3 mm	10 m	30	300 m	60	18.00 m
15548	4026639155481	15 mm	2-3 mm	10 m	20	200 m	60	12.00 m
15549	4026639155498	12 mm	3-6 mm	8 m	25	240 m	60	14.40 m
15550	4026639155504	15 mm	3-6 mm	8 m	20	160 m	60	9.60 m
15552	4026639155528	15 mm	5-10 mm	5 m	20	112 m	60	6.72 m
15553	4026639155535	20 mm	5-10 mm	5 m	15	84 m	60	5.04 m
15554	4026639155542	15 mm	7-12 mm	4.3 m	20	86 m	60	5.16 m
15555	4026639155559	20 mm	7-12 mm	4.3 m	15	64.5 m	60	3.87 m
15556	4026639155566	20 mm	8-15 mm	3.3 m	15	49.5 m	60	2.97 m
15557	4026639155573	20 mm	10-18 mm	2.6 m	15	39 m	60	2.34 m

Remove the protective sheet



Cut the outer protective sheet with a utility knife and remove this film.

Cut off the start of the tape



Unroll some of the CONTEGA FIDEN EXO and cut off the overcompressed start of the tape (approx. 2 cm).

Stick the tape to the frame



Remove the backing paper, align the tape straight on the frame and gradually stick in place. The tape must not be visible after installation (recess approx. 1 - 2 mm).

Allow for slack in the tape



Allow for a small amount of slack in the tape when sticking it in place, particularly near joints – **do not stretch the tape!**

Use butt-joints at corners



Stick the tape around the circumference of the frame. Use one length of CONTEGA FIDEN EXO per side here and use butt-joints at the corners. Allow for a small amount of slack near the corners.

Install the window



Install the window professionally using a suitable fastening system.

Further information about application and construction is given in the pro clima planning documentation and application recommendations.
(Please also note the recommendations of the currently valid version of the pro clima application matrix.)

Pro Clima New Zealand Ltd

Freephone: 0800 PRO CLIMA (776 254)

Email: welcome@proclima.co.nz

Web: www.proclima.co.nz

The information provided here is based on practical experience and the current state of knowledge. We reserve the right to make changes to the recommendations given or to make alterations due to technical developments and associated improvements in the quality of our products. We would be happy to inform you of the current technical state of the art at the time you use our products.

