



Installation Guide

pro clima **TESCON® WS**

Pure Aluminium tape for wet seal connections



WHAT FOR?

- ✓ Wet seal connection between sill tape and joinery

APPLIED TO?

- ✓ SOLITEX EXTASANA®
- ✓ SOLITEX MENTO®
- ✓ TESCOB EXTOSAL®
- ✓ TESCOB EXTORA®
- ✓ Ecoply® Barrier Sill Tape
- ✓ Ecoply® Barrier Frame Sealing Tape

ADVANTAGES

- ✓ Pure aluminium for wet seal adhesion
- ✓ Durable
- ✓ Thin
- ✓ Can be applied to cold surfaces



1

Preparation

Ensure opening is dry and free of dirt, dust, oils and grease



2

Installation of the tape

Install TESCOB WS in appropriate position around the full perimeter of the opening



3

After joinery is installed

Apply PEF rod from the inside of the window to the full perimeter

internal




4

Apply wet seal sealant

Apply to full perimeter of opening

internal

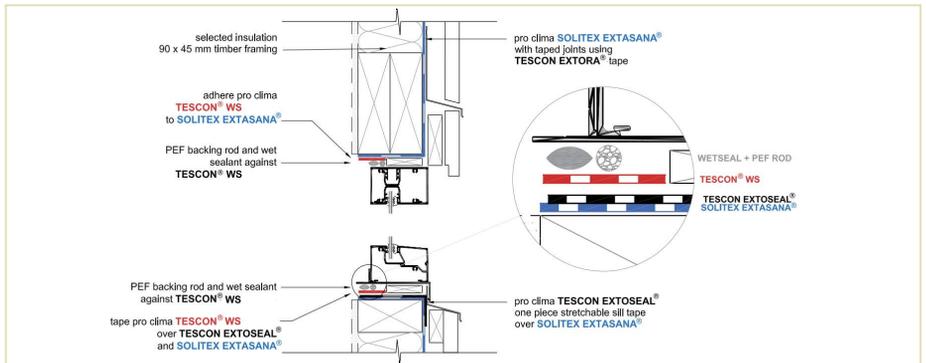


TESCOB WS
Pure Aluminium tape for wet seal connections



TESCOB EXTOSAL®
Sill Tape



TESCOB EXTORA®
Weathertight Sealing Tape

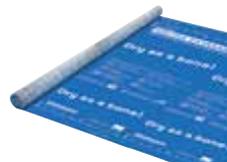

SOLITEX EXTASANA®
Wall Protection Membrane

If you have any questions please contact us:

Pro Clima New Zealand Ltd
PO Box 925
CBD
Wellington 6140
Phone: 0800 PRO CLIMA (0800 776 254)
Email: welcome@proclima.co.nz

www.proclima.co.nz

Pro Clima Australia Pty Ltd
PO Box 924
Gosford
NSW 2250
Phone: 1800 PRO CLIMA (1800 776 254)
Email: welcome@proclima.com.au

www.proclima.com.au

Note: please contact pro clima for test documentation from wet sealant providers